



Pilot Valve Assembly (11)
ACP 100 0028

Item #	Part Description	Part #	Qty
49	Pilot Valve Stem	ACP 100 0003	1
50	Pilot Valve Seal	ACP 100 0006	1
51	O-Ring	ACP 100 0045	2
52	Pilot Valve Seat	ACP 100 0005	1
53	O-Ring	ACP 100 0046	2
54	Pilot Valve Cap	ACP 100 0004	1

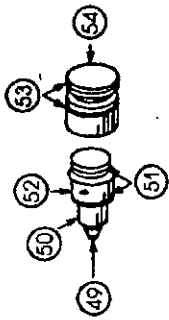


Piston Returning Diaphragm Assembly (15)
ACP 100 0027

Item #	Part Description	Part #	Qty
55	Diaphragm	ACP 190 0021	1
56	Diaphragm Jet	ACP 100 0022	1

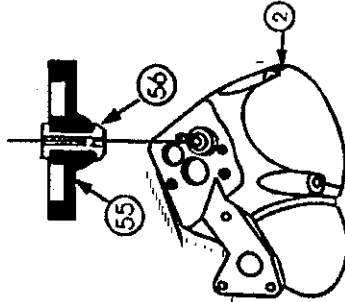

Touch Valve Stem Assembly (16)
ACP 100 0041


Item #	Part Description	Part #	Qty
57	Valve Seal	ACP 100 0034	1
58	Valve Stem	ACP 100 0040	1

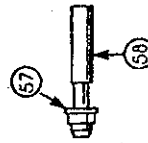

Handle Housing Assembly (1)
ACP 190 0004A

Item #	Part Description	Part #	Qty
33	Housing	ACP 190 0003A	1
34	Hose Fitting	ACP 100 0024	1
35	Trigger Bushing	ACP 100 0030	1
36	O-Ring	ACP 100 0044	1
37	Valve Seat	ACP 100 0032	1
38	Hose Fitting	ACP 100 0025	1
39	Hose 1/8 x 16-1/2	ACP 190 0007	1
40	Nut	ACP 100 0104	1
41	Bolt	ACP 100 0103	1
42	Trigger Lever	ACP 100 0015	1
43	Trigger Valve Stem	ACP 100 0023*	1
44	Valve stem Seal	ACP 100 0019*	1
45	Trigger Spring	ACP 100 0031	1
46	Pipe Plug	ACP 100 0033	1

* Assembly # ACP 100 0029

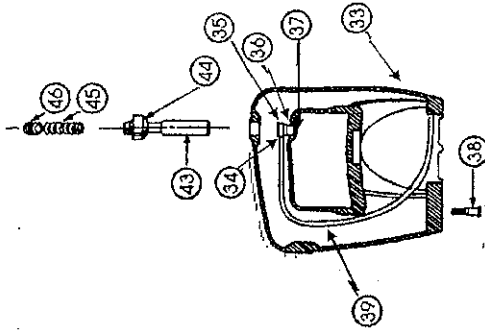

Nose Support Assembly (15)
ACP 190 0014K

Item #	Part Description	Part #	Qty
47	Nose Support	ACP 190 0014	1
48	Guide Bushing	AB 0082	1

